




**BLUEBIRD
INDUSTRIES**

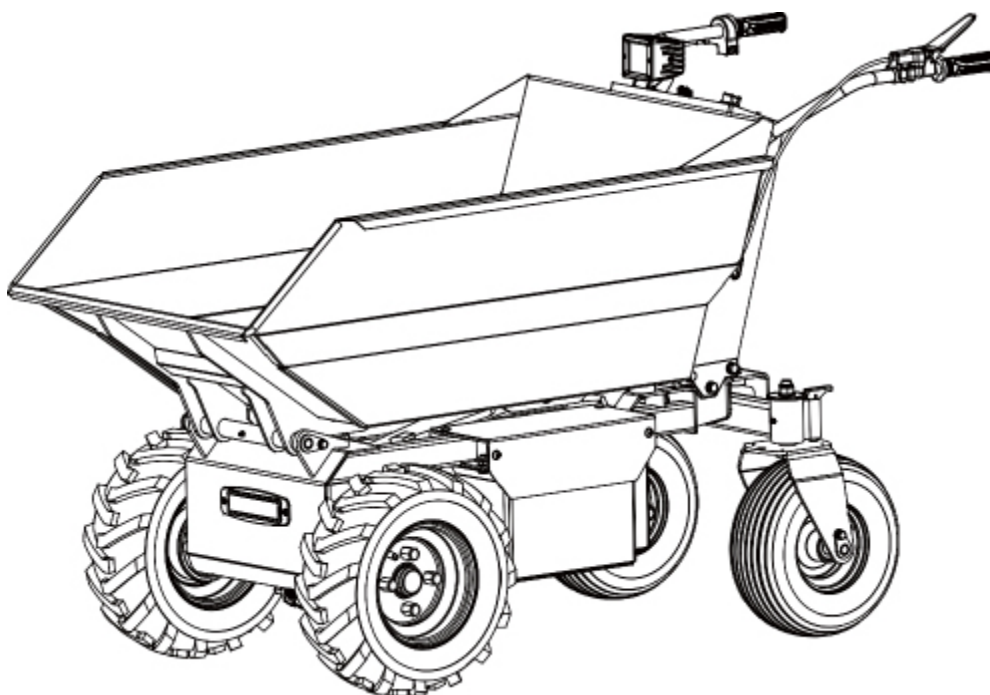

MOTORIZED WHEELBARROW

User manual

MODEL NUMBER: WB 500 EH

SERIAL NUMBER: _____

The model number and serial number are shown on the main label.
They must be kept in a safe place for future use.

FOR YOUR SAFETY

**READ AND UNDERSTAND THE ENTIRE MANUAL BEFORE OPERATING
THE EQUIPMENT**

SUMMARY

Introduction	2
Features	2
Symbols	2
Personal safety	3
Use and maintenance of electrical equipment	4
Use and maintenance of cordless equipment	4
Specific safety standards	5
Assistance	5
Package contents	6
Mounting	7
Get to know your electric wheelbarrow	8
Operation of the electric wheelbarrow	9
Maintenance	13
Storage	13
Warnings regarding	13
Troubleshooting	14

INTRODUCTION

Your new electric wheelbarrow will exceed your expectations. It has been manufactured to strict quality standards to meet superior performance criteria. You will find your new product easy and safe to use, and with proper maintenance, it will provide you with many years of reliable service.

Please read the entire user manual carefully before using the machine. Pay special attention particular attention to the precautions and warnings.

Features

Load capacity	1000 W, 48 V brushless DC motor
Braking system	Electromagnetic brake
Battery	48V 20Ah/32Ah lead-acid battery
Battery autonomy	8-10 h
Charging time	6-7 h
Operating load	501 kg
Load capacity	23.6 cubic meters
Dumping speed	HPU (hydraulic power unit)
	0-1.49 kph
Walking speed	Fast speed 0-4.9 km/h
	Medium speed 0-4.1 km/h
	Slow speed 0-3.3 km/h

ECOLOGICAL



Recycle unnecessary materials instead of discarding them. All accessories, hoses, and packaging must be used, taken to the local recycling center, and disposed of in a safe and environmentally friendly manner.

SYMBOLS

The nameplate of your machine may display symbols. These represent important information about the product or instructions on its use.



Caution! Ignoring the safety signs and warnings on the machine, as well as the safety and operating instructions, may result in serious or even fatal injuries.



Read these instructions carefully.



Wear safety glasses. Wear hearing protection



Wear protective gloves.



Wear safety shoes.



When reversing, at idle, slowly operate the clutch lever while ensuring there are no obstacles behind the vehicle.



Keep hands and feet away from the tracks



It is forbidden to sit on the machine and to transport people.



To avoid injury during maintenance, maintenance operations should only be carried out when the dumper is on stable ground and is securely blocked.



Do not use the machine in the rain.



Keep hands away from rotating parts.



Keep bystanders at a distance.



Do not use the wheelbarrow for transporting people.



Do not secure the projector while it is running.



WARNING Risk of pinching and crushing. Keep your hands free during operation.

SAFETY

General safety standards

Understand your device

Read and understand the operating manual and the labels on the shredder. Familiarize yourself with the application and limitations of the device as well as the specific potential risks.

Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow the instructions listed below can result in electric shock, fire, and/or serious injury. Keep all warnings and instructions for future reference. The term "power tool" in the warnings refers to your mains-powered (corded) or battery-powered (cordless) power tool.

Work area

- a) Keep the work area clean and well lit. Cluttered or dark areas increase the risk of accidents.
- b) Do not use power tools in explosive atmospheres, such as e.g. near flammable liquids, gases, or dust. Power tools create sparks that can ignite dust or fumes.
- c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Personal safety

- a) Be careful, pay attention to what you are doing, and use common sense when operating a power tool. Do not use a power tool when you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious injury.
- b) Use personal protective equipment. Always wear safety goggles. Protective equipment such as a dust mask, non-slip safety shoes, helmet, or hearing protection, when used under appropriate conditions, reduce injuries.
- c) Prevent unintentional starting. Make sure the switch is off before connecting the device to the power source and/or battery or picking it up or carrying it. Carrying power tools with your finger on the switch or turning on power tools with the switch on increases the risk of accidents.

- d) Remove all adjustment wrenches or keys before switching on the power tool. A wrench left on a rotating part of the power tool can cause injury.
- e) Do not exceed the limits. Always maintain proper footing and balance. This allows better control of the power tool in unexpected situations.
- f) Dress appropriately. Do not wear loose clothing or jewelry. Keep hair and clothing away from moving parts. Loose clothing, jewelry, or long hair can get caught in moving parts.
- g) If dust extraction and collection devices are available, make sure they are properly connected and used. The use of dust extraction can reduce dust-related hazards.
- h) Do not let familiarity gained from frequent use of the devices make you complacent and disregard the safety principles of the devices. A careless action can lead to serious injury in a fraction of a second.
- i) Do not use the machine in the rain. This can lead to loss of control, slipping, and falls, increasing the risk of injury.

Use and care of power tools

- a) Do not force the power tool. Use the right power tool for your application. The right power tool does the job better and more safely at the speed for which it was designed.
- b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- d) Keep inactive power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to use the power tool. Power tools are dangerous in the hands of untrained users.
- e) Maintenance of power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts, or any other condition that may affect the operation of the power tool. Have the power tool repaired before use if it is damaged. Many accidents are caused by poorly maintained power tools.

- g) Use the power tool, accessories, and bits, etc. according to these instructions and taking into account the working conditions and the work to be performed. Using the power tool for operations different from those intended could result in a hazardous situation.
- h) Keep handles and gripping surfaces dry, clean, and free from oil and grease. Slippery handles and gripping surfaces do not allow for safe handling and control of the tool in unforeseen situations.

Use and care of battery-powered devices

- a) Charge only with the charger specified by the manufacturer. A charger suitable for one type of battery may present a fire hazard when used with another type of battery.
- b) Use power tools only with the batteries designated for them. The use of Any other battery may present a risk of injury and fire.
- c) When the battery is not in use, keep it away from other objects such as wrenches, nails, screws, or other small metal objects that can connect to each other. A short circuit of the battery terminals can cause burns or a fire.
- d) Under abusive conditions, liquid may leak from the battery; avoid contact. In case of accidental contact, rinse with water. If the liquid gets into your eyes, seek medical attention. Spilled battery fluid can cause irritation or burns.
- e) Do not use damaged or modified batteries or instruments. Damaged or modified batteries may exhibit unpredictable behavior, which can lead to fire, explosion, or risk of injury.
- f) Do not expose the battery or the device to fire or excessive temperatures. Fire or temperatures above 130 °C can cause an explosion. NOTE: The temperature "130 °C" can be replaced by the temperature "265 °F".
- g) Follow all charging instructions and do not charge the battery or the tool outside the temperature range specified in the instructions. Improper charging or charging at temperatures outside the specified range can damage the battery and increase the risk of fire.

Maintenance

a) Have the power tool repaired by a qualified person who uses only identical replacement parts. This ensures the continued safety of the power tool.

b) Never repair a damaged battery. Batteries should only be serviced by the manufacturer or authorized service providers. Never stop the tool on a sloped surface.

c) For cordless tools:

1) Instructions for charging the battery, information about the ambient temperature range for using and storing tools and batteries, as well as the recommended ambient temperature range for the charging system during charging;

2) For a cordless tool intended for use with a removable or detachable battery: indications of the batteries to be used, e.g. e.g. in the form of a catalog number, a serial number, or an equivalent indication;

3) Indications of the suitable battery charger for use, e.g. e.g. by a catalog number, a serial number, or an equivalent indication.

Specific safety standards

Carefully check the work area, keep it clean and free of debris to avoid tripping hazards. Work on level ground.

Never place your body where it could be endangered by movements during assembly, installation and operation, maintenance, repair, or relocation.

Keep all bystanders, children, and pets at least 23 meters away. If they approach, stop immediately the device.

Do not climb onto the dumper and do not transport people.

Never park the machine on unstable ground that could give way, especially when it is full.

Disengage the clutch lever before starting the engine. Start the engine carefully according to the instructions and keep your feet away from moving parts. Moving parts.

Never leave the working position while the engine is running.

Always hold the device firmly with both hands during operation. Hold the handlebar tightly. Remember that the machine can unexpectedly jerk upwards or jump forward when it encounters obstacles such as, for example, e.g. large rocks.

Never walk or run with the machine.

Do not overload the capacity of the machine. Drive at a safe speed that you adjust to the slope of the terrain, the road conditions, and the weight of the load.

Be extremely careful when reversing or pulling the machine towards you.

Be especially careful when working on or crossing unpaved paths, trails, or roads. Watch out for hidden hazards or traffic.

Drive on soft ground in first gear/reverse gear. Do not accelerate quickly, do not make sharp turns, and do not stop abruptly.

Be extremely careful when working on frozen ground, as the machine may skid.

If possible, avoid driving on gravel, crushed stone, reinforced concrete, field brush, logs, etc., as this can cause fatal damage or reduce the lifespan of the tracks.

Do not use the machine in confined areas where there is a risk of the operator being crushed between the machine and another object.


Never use the machine on a slope with an angle of more than 20°.

Always ensure even weight distribution when driving forward or backward on a slope. Always move parallel to the slope (uphill or downhill).

When tilting the dumper, the center of gravity constantly changes, and the ground conditions are crucial for the stability of the machine. There are particular risks for dumpers operating on soft ground and when the load sticks to the body, e.g. e.g. with wet clay.

PROVIDED CONTENTS

The electric wheelbarrow is delivered partially assembled in a carefully packed box. After you have removed all parts from the packaging, you should have:

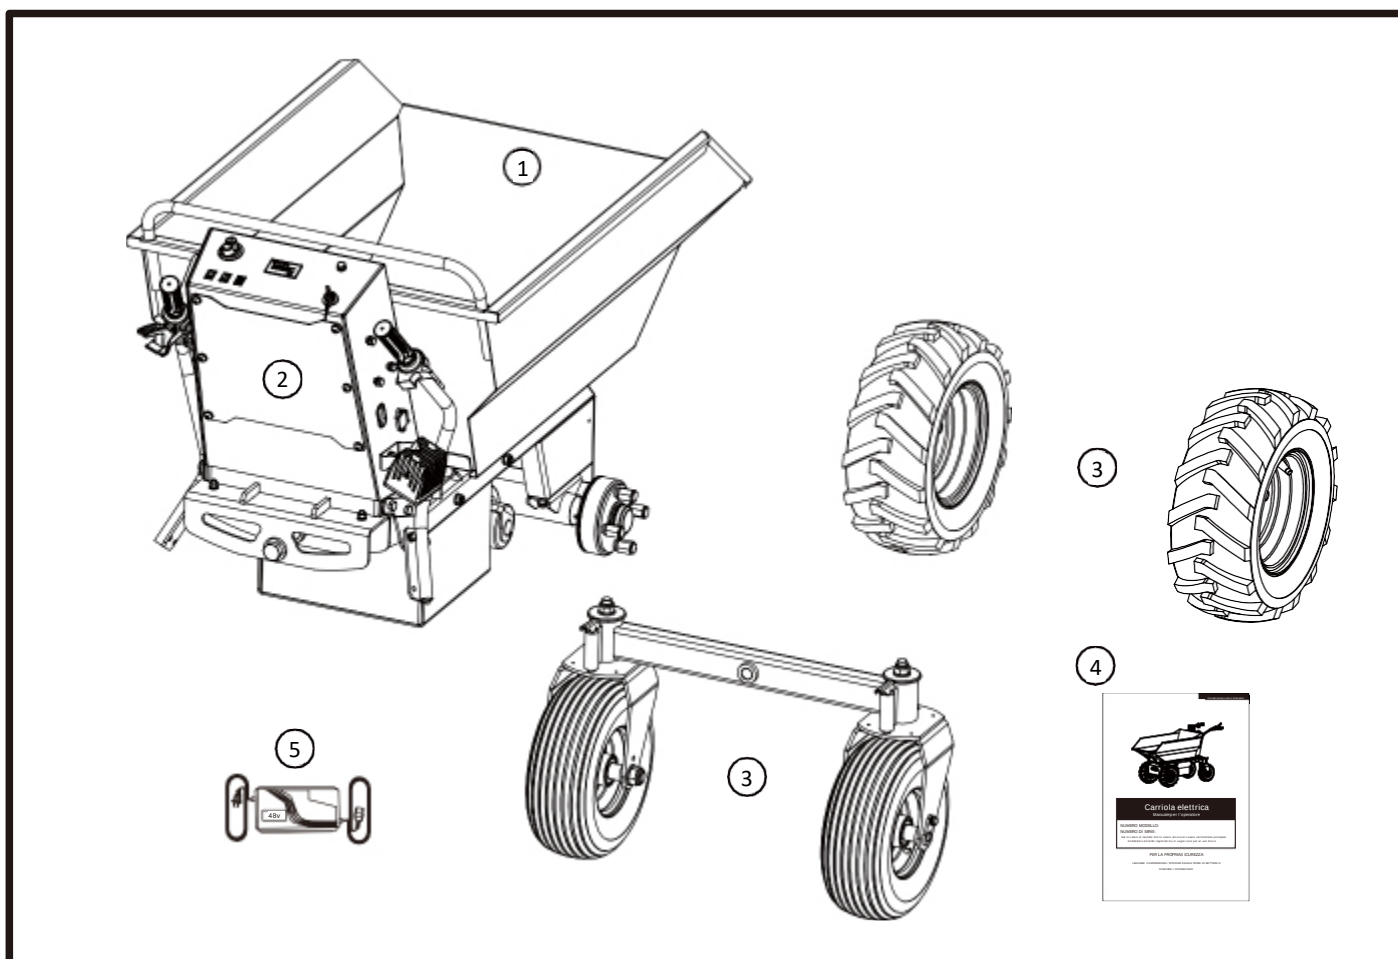


1. Tipper box
2. Main frame
3. Wheels
4. Operating Manual
5. Charger


ASSEMBLY

If you follow the assembly instructions below, the device will be assembled in a few minutes.


Assembly of the machine

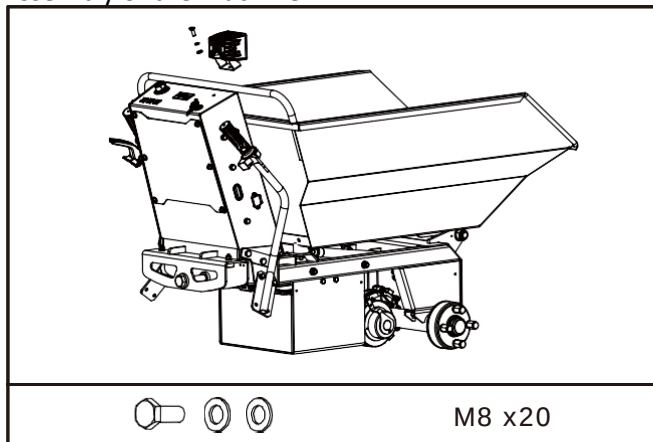

Install the light and secure it with M8 nuts.

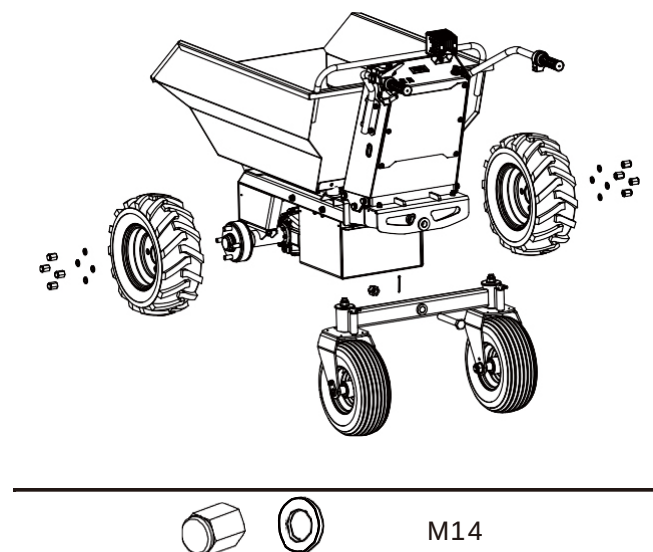


Install the front wheels and secure them with the M14 hub nut and the spring washer 14. Install the rear wheels and secure them with the axle collar.

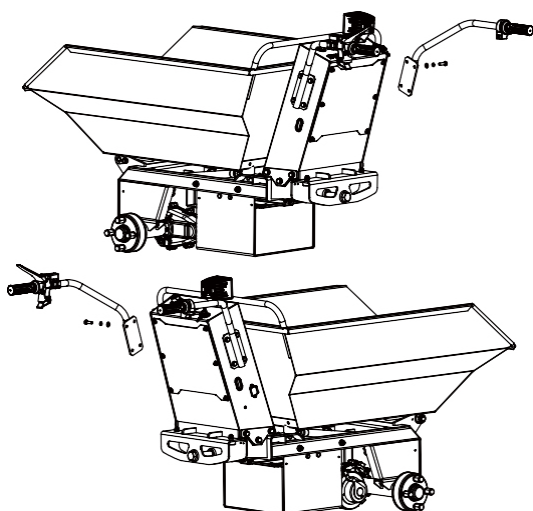

Install the right and left handles with M8X25 screws

GETTING TO KNOW THE WHEELBARROW

Features and controls

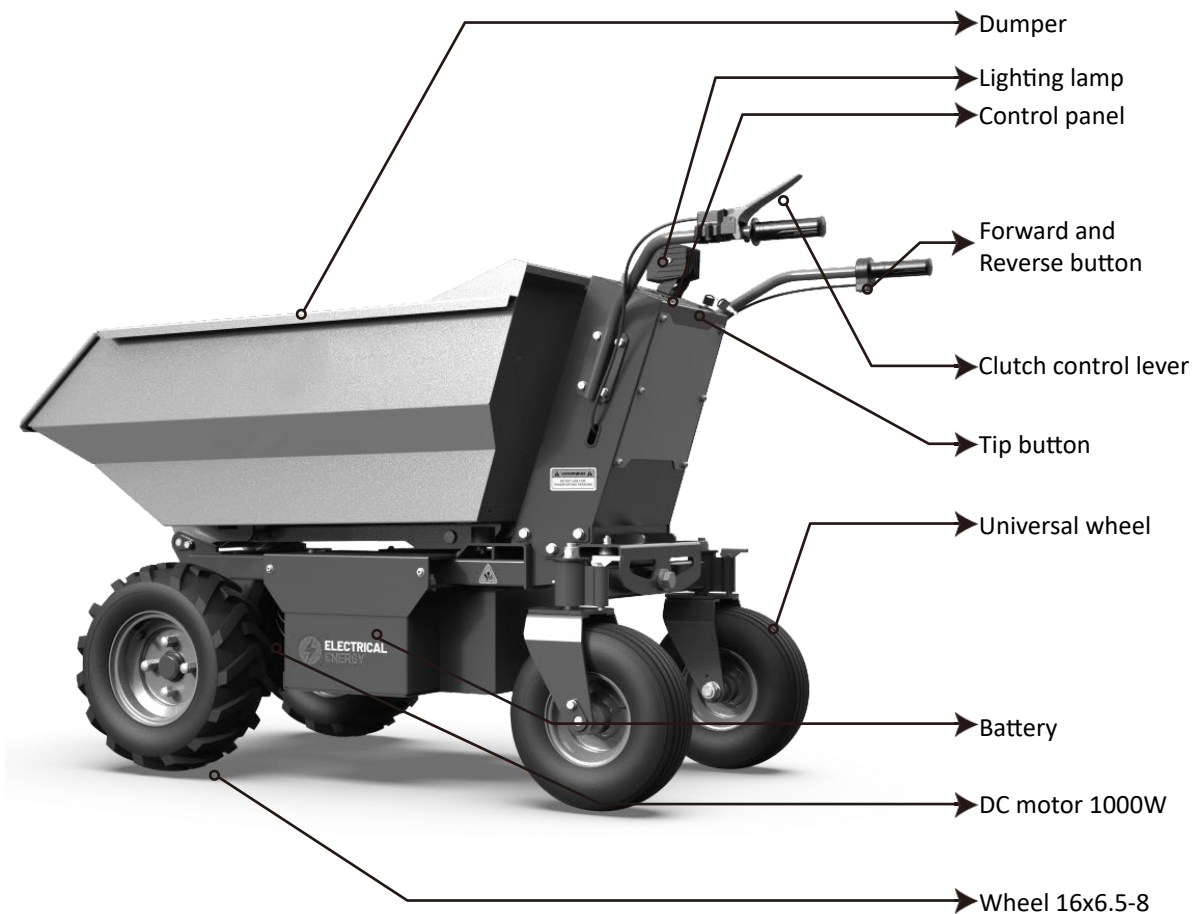

Clutch operating lever

Press down the operating lever, clutch engaged.
Release the lever, clutch disengaged.

Tip button

Controls the tipping of the body. Detailed operating instructions can be found in the following manual.

Light

The light can be switched on in poor lighting conditions.


Forward and reverse button

The red button on the handle controls forward and reverse travel; when it is in the "D" position, the machine moves forward, and when pressed to "R", the machine moves backward.

Universal wheel

If you want to drive left or right, hold the handlebar firmly to steer the universal wheel left or right. Pull down on the wheel blocks shown in Figure 4, and the machine will glide directly forward and backward.

Control panel

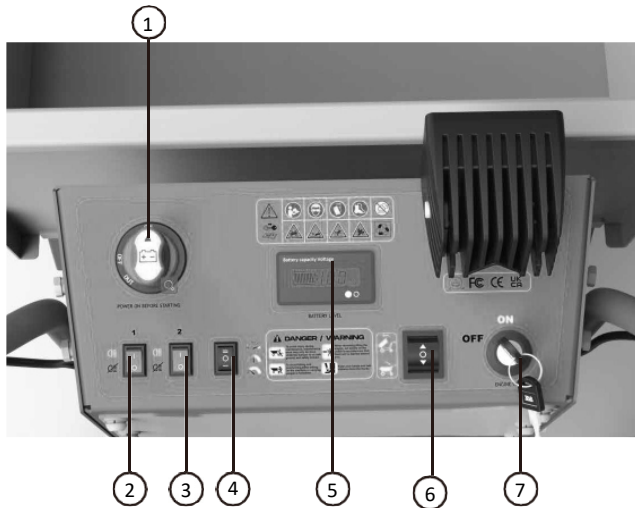

1. Battery switch: Turn the knob to the "ON"/"OFF" position, the machine will be switched on/off. Indicator light 5 illuminates when the switch is in the "ON" position.
2. Button for the front light
3. Light button (on the control panel)
4. Speed button: Select speed 1.2.3
5. Voltmeter
6. "Tilt" button.
7. Switch lock: Turn the keys to the "On/Off" position to switch the dumper on/off.

Operation of an electric wheelbarrow

PRE-OPERATION CHECKS

1.1 Checklist

To ensure correct operation and maximum service life, some preliminary checks must be carried out before use:

- Battery: Check the battery status using the display.
- Chains: check for tension, looseness, or damage.
- Cleaning: check for dirt or deposits.
- Clamping of parts: check for looseness and correct if necessary.
- Clutch lever of the transmission: check function.
- Steering clutch lever: check function.
- Collection container: check that it is locked in the lower position.

You can find all detailed maintenance work in the "Maintenance" chapter.

1.2 Checking and charging the battery



- Battery Charge the battery with the appropriate charger.
- Prevent dust or water from entering the charging port

1. Switch on the battery
2. Switch on the dumper using the buttons
3. Check the battery level on the display.

STARTING THE ENGINE



- Start the engine after confirming the safety background.
- Make sure that the transmission clutch is in the stop position before starting the engine to avoid accidents.



- Do not let the handle snap back quickly. Pull the handle back slowly to avoid damage.
- Do not pull the starter handle while the engine is running, as this could damage the starter.

1. Switch on the battery (position ON).



2. Make sure that the transmission clutch is in the STOP position.




3. Switch off the dumper by pressing the buttons.



4. Engage gear ("D" is drive and "R" is reverse)



5. Select speed (1, 2 or 3)

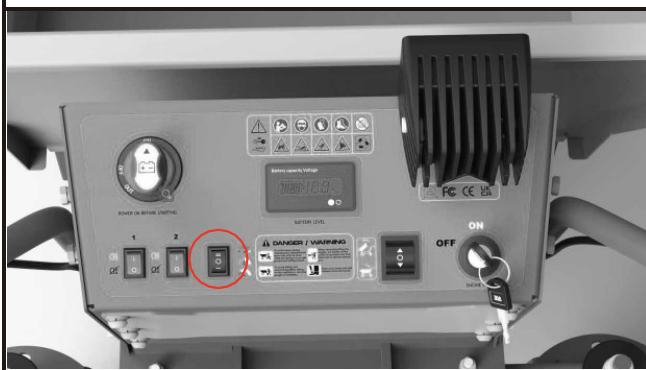

TRANSMISSION



DANGER

Check the function of the brakes before starting work.

- To avoid loss of control on steep slopes, drive at LOW SPEED and with the accelerator pedal in position 1.
- Turning can be abrupt. Make sure that the load is securely fastened to the body. Be especially careful when driving down a slope.



NOTE

Never shift gears when the vehicle is moving.

- Always shift with the engine running and with the transmission clutch lever in the STOP position.
- If the gear lever cannot be moved, move the transmission clutch lever slightly forward. After that, the gear lever can be moved again.
- If the engine is operated at low speed for a long period, carbon deposits can easily form on the spark plug. These must be removed by running the engine at high speed.

1. Transmission

- 1.1 Follow the procedure for starting the engine.
- 1.2. Press the drive switch to position 1, 2, or 3.
- 1.3. Select the desired gear ("D" for normal drive or "R" for reverse).
- 1.4. Press the red throttle lever to operate the dumper. The machine moves.
- 1.5. Release the red throttle lever to brake.



2. Freight transport



DANGER

To avoid accidents or tipping over:

- Observe the safety limits specified in the "Safety Instructions" section, Chapter 1, and in the following "Load Limit" section.
- Do not position the load in a way that shifts the machine's center of gravity out of balance. Pay attention to the height of the load. Pay attention to the width of the load.
- Make sure that the load does not protrude beyond the walls of the box.



DANGER

- Make sure that the load does not obstruct the operator's view.
- Secure the load with strong ropes or straps using the securing hooks. Do not attach the ropes to other parts of the equipment.
- When transporting a heavy load, pay special attention to the balance of the machine and ensure that the load is well distributed and does not tip over. A tipped load can cause serious injury and damage, as the machine can tip over when starting, braking, or driving on uneven roads.
- Before using the machine, make sure that the box is locked (side walls and front wall).
- If you use the cart on soft or uneven ground, reduce the speed:
- Increase the speed and be very careful.
- On steep slopes, select a low gear and set the accelerator pedal to position 1. Never engage reverse gear on a slope.
- Be extremely careful when starting, stopping, and operating the machine on a slope.

2. Freight transport




DANGER

- Compliance with the following load and slope limits
- On slopes:
- Always drive the machine in first gear.
- On unstable ground, reduce speed and proceed with caution.
- On a slope, reduce engine speed and engage the engine brake.
- Be especially careful when moving or stopping the forklift on a slope.
- Avoid changing gears and turning maneuvers on steep slopes.
- Secure the load with ropes.
- If stability is not achieved, you should reduce the load.
- As visibility decreases on slopes, you should reduce the height of the load.


Flat ground conditions

- Max. load = 500 kg
- Maximum loading height * = 800 mm
- * from the bottom surface of the drop box

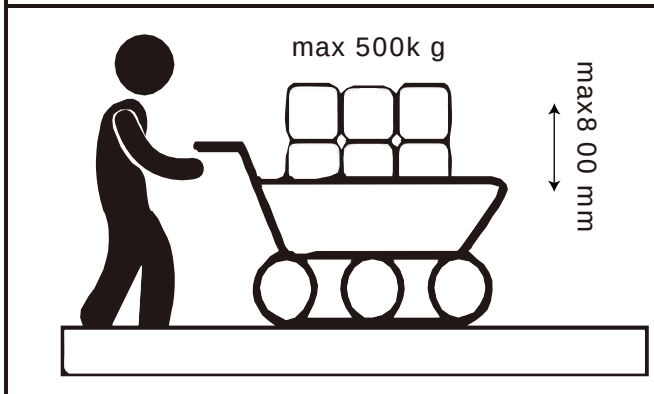

Condition of slopes

- Maximum permissible slope = 15°.
- Maximum load=
 - 1) 200 kg, for inclines < 10° (17%)
 - 2) 100 kg, for slopes between 10° and 15° (17%:26%)
- Maximum loading height (from the bottom surface of the box) =
 - 1) 300 mm per descent
 - 2) 500 mm per ascent
- * from the bottom surface of the drop box

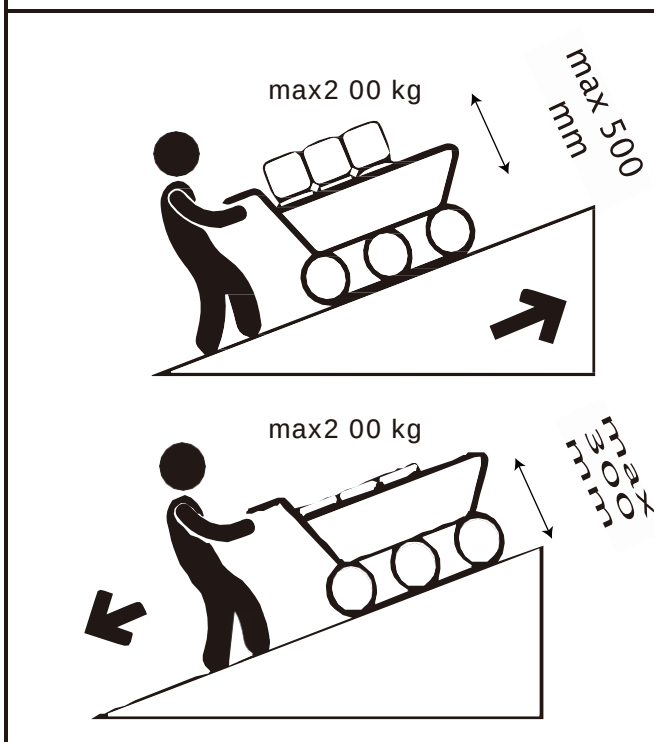

2. Exhaust

1. Press the tip button forward; the skip will automatically lift until it reaches the desired position and unloading is complete.
2. When unloading is complete, press the tip button backward; the skip will return to its original position.



TURNING OFF THE MACHINE



DANGER

- Avoid abrupt stops: This could cause the machine/load to tip over.
- Stop the machine in a level area that is free from potential hazards.
 - Do not park the machine on a slope and block the wheels if necessary.

1. Emergency shutdown

1. Release the red throttle lever to brake and stop the dumper. The machine will stop.

2. Turn off the battery switch.

2. Normal shutdown

1. Release the red throttle lever to brake and stop the dumper.

2. Turn the ignition key to OFF.

3. Turn off the battery switch.

MAINTENANCE

Regular maintenance and adjustments are necessary to keep the device in good condition. Carry out inspection and maintenance according to the maintenance schedule given below.

Do not start maintenance work in poor visibility conditions.



DANGER

- Stop the machine before continuing with maintenance work.
- Before maintenance, wait until the hot parts have cooled down.



WARNING

- Maintenance personnel must use protective equipment



NOTE

- Use the recommended products.
- Use original spare parts or equivalent spare parts. The use of parts of non-equivalent quality may damage the machine.

Wheel lubrication

We recommend lubricating the wheels every 100 operating hours. This ensures smooth operation.

Tyres

Check that the wheel nuts are tightly fastened. Loose wing nuts can cause the tires to loosen and loss of control.

Hardware

Check all fasteners regularly to ensure they are secure. Tighten all loose parts.

Cable connections

Check all cable connections regularly.

Brake system

Check the motor's carbon brush regularly; if it is heavily worn, it should be replaced with a new one.

Battery charger

Check the charger regularly for damage to cables, plugs, housing or other parts that could cause fire, electric shock or injury. Do not use the charger if it is damaged until the damage has been properly repaired.

Battery

Check the batteries regularly, always keep them clean and dry. It is recommended to fully charge the batteries installed in the device before each use. Always charge the batteries in an upright position. You will achieve the best results if you charge the batteries while installing them in your device. Keep the battery box and/or the machine in an upright position during storage, with the machine's drive wheels and both support legs level.

PRESERVATION

If the device is not used for more than 30 days, proceed as follows to prepare it for storage.

1. The batteries must be charged before storage and recharged regularly.
2. Keep the batteries clean and dry, do not store the entire device in a damp environment. Batteries also age during storage.
3. Protect the batteries from overheating and flames: there is a risk of explosion.
4. Use clean cloths to clean the outside of the device and keep the air inlets clear.
5. Store the device upright in a clean, dry environment with good ventilation.
6. Do not expose the wheelbarrow to direct sunlight during storage.
7. Disconnect the batteries from all electrical circuits before storage and preferably store them in a cool, dry place.
8. During storage, disconnect the batteries from the motor unit by disconnecting the plugs and any cables from the terminals.

DISPOSAL WARNINGS

Devices, accessories and packaging must be recycled in an environmentally friendly manner. Discharged batteries must be recycled in accordance with Directive 2006/66/EC. Do not dispose of used batteries in household waste, fire, or water. Do not open the batteries and return them to the appropriate collection points. Do not dispose of with household waste, but collect separately. The electrical substances and components contained in this device can be harmful to the environment if not handled properly or if used incorrectly. The symbol of the "crossed-out wheeled bin with a black bar under the bin" means that this device was placed on the market after 13.08.05 and must be collected separately. Any misuse will be prosecuted.

TROUBLESHOOTING

Problem	Possible cause	Solution
The machine is not in operation. The machine was in operation but suddenly stopped. Short operating time (less than 1-3 hours per charge). The machine runs slowly. The battery warning lights do not light up.	Weak battery.	Charge the battery. A new battery must be charged for at least 12 hours before using the device for the first time. After the first use, charge the battery until the green charging light comes on. Check all plugs. Make sure that the charger plug is connected to the battery box and the charger is plugged into the socket. Make sure that the power supply to the socket is switched to 'ON'.
	The battery charger does not work.	There is no reliable way to determine if the charger is working unless you have a voltmeter. If you suspect there is a problem with the charger, contact customer service.
	Loose cables or loose plugs.	Check all cables and plugs. Make sure that the motor wiring harness plug is connected to the battery and that there are no loose cables.
	Weak battery.	Charge the battery as specified in the user manual.
	Motor damage.	
	Overcharged battery.	Do not charge the battery for more than 30 hours. If you suspect damage due to overcharging, contact customer service.
	The machine is overloaded and/or the operating conditions are overloaded.	Be careful not to overload the device, the maximum load capacity is 500 kg, or work in a less demanding environment.
The device operates intermittently.	Loose cables or plugs.	Check that all cable connections are secure.
	Motor or electrical damage.	Contact customer service for diagnosis and/or repair
The battery makes a hissing or bubbling noise during charging.	It is normal for batteries to make noises or swell slightly during charging, and there is no cause for concern.	No action is required.
		If the battery does not make noises or swell slightly during charging, this does not mean that it is not accepting the charge.
One or more tires are flat.	The tire has lost air.	Inflate the tire with a sufficient amount of air.
	Burst tire.	Install or replace the damaged tube.
	Leaking tire air valve.	Replace or tighten the tire air valve.
The machine appears looser or less stable than during initial assembly.	The hardware has come loose.	Tighten all fasteners with appropriate tools.

EC DECLARATION OF CONFORMITY - HERSTELLERERKLÄRUNG - DECLARATION 'CE' DE CONFORMITE - DECLARACION DE CONFORMIDAD - DICHIARAZIONE DI CONFORMITA' EUROPEA - GELIJKVORMIGHEIDSVERKLARING - EC DEKLARATION I OVERENSSTEMMELSE - DECLARAÇÃO CE DE CONFORMIDADE - EY ILMOITUS - FORSAKRAN OM OVERENSSTAMMELSE - BEKREFTENDE EU ERKLÆRING - ΔΗΛΩΣΗ ΕΚ ΣΥΜΜΟΡΦΩΣΗΣ - EUROPEJSKA DEKLARACJA ZGODNOSCI

1) MANUFACTURER - HERSTELLER - FABRICANT - FABRICANTE - ~~STRUTTORE~~ - CONSTRUCTEUR - PRODUCENT - FABRICANTE - VALMISTAJA - TILLVERKARE - FABRIKANT - Κατασκευαστής - PRODUCENT: Blue Bird Industries Fabbrica Motori s.r.l. Via Due Camini 19, 36010 Zanè (VI) Italia

1) DESCRIPTION OF THE MACHINERY - BESCHREIBUNG DER MASCHINE - DESCRIPTION DE LA MACHINE - DESCRIPCION DE LA MAQUINARIA - DESCRIZIONE DELLA MACCHINA - BESCHRIJVING VAN DE MACHINE - BESKRIVELSE AF MASKINEN - DESCRIÇÃO DA MAQUINA - KONEEN NIMITYS - MATERIELSLAG - BESKRIVELSE AV MASKINERI ET - ΠΕΡΙΓΡΑΦΗ ΤΩΝ ΜΗΧΑΝΩΝ - OPIS MASZYN: MOTOCARRIOLA / WHEELBARROW

a) MAKE - FABRIKAT - MARQUE - MARCA - MARCA - MERK - MÆRKE - MARCA - MERKKI - FABRIKAT - FABRIKANT - MAPKA - MARKA: BLUE BIRD

b) TYPE / TYP / TYPE / TIPO / TIPO / TYPE / TYPE / TIPO / MALLI / TYPBE / TYPE / ΤΥΠΟΣ / TYP: WB 500 E WB 500 EB WB 500 EH

c) Il prodotto è conforme alle direttive - The product complies with the directives - Das Produkt entspricht den Richtlinien - Le produit est conforme aux directives - El producto cumple con las directivas:

- 2006/42/EC - 2014/30/EU - 2000/14/EC (2005/88/EC) - 2011/65/EU

d) REFERENCE TO STANDARDS/HARMONIZED STANDARDS - VERWEIS AUF NORMEN/ARMONISIERTE NORMEN - REFERENCE AUX NORMES/NORMES HARMONISEES - REFERENCIA A ESTANDARES/ESTANDARES ARMONIZADOS - RIFERIMENTO ALLE NORME/NORME ARMONIZZATE - REFERENTIE NAAR STANDAARDEN/GEHARMONISEERDE STANDAARDEN - REFERENCE TIL STANDARDER/HARMONISEREDE STANDARDER - REFERENCIA AS NORMAS/NORMAS HARMONIZADAS - VITTAUS STANDARDEIHIN/YHTEISIIN STANDARDEIHIN - REFERERANDE TILL STANDARDER/HARMONISERADE STANDARDER - HENVISNING TIL STANDARD/FELLES STANDARD - ΑΝΑΦΟΡΑ ΣΤΑ ΠΡΟΤΥΠΑ/ΕΝΑΡΜΟΝΙΣΜΕΝΑ ΠΡΟΤΥΠΑ - ODNIESIENIE DO NORM/NORM ZHARMONIZOWANYCH:

EN ISO 12100:2010 EN 61284-1:2015

2000/14/EC (2005/88/EC) – Livelli di potenza sonora come da allegato V – Sound Power Levels performed per annex V	
TIPO	Livelli di Potenza Sonora Misurata / Livelli di Potenza Sonora Garantita LWA Sound Power Levels Measured / Sound Power Level Guaranteed LWA (dB)
WB 500 E	69 / 89
WB 500 EB	
WB 500 EH	

Importato da - Imported by - Eingeführt von - Importé par - Importado por:



BLUE BIRD INDUSTRIES – FABBRICA MOTORI s.r.l.
ZANÈ (VI) – ITALIA 20-01-2021
The chairman – Der vorsitzender – Le président – El presidente – Il presidente – De voorzitter – Daglig leder – O presidente – Toimitusjohtaja – Verkställande direktör – Administrerende direktør – Ο ΠΡΟΕΔΡΟΣ - Prezes

VANDA VITELLA

(GB) Technical documentation maintained by
(F) Documentation technique maintenue par
(I) Documentazione tecnica conservata da
(DK) Teknisk dokumentation tilhandhællen av
(FI) Teknisten asiakirjojen ylläpitäjä
(NO) Teknisk dokumentasjon vedlikeholdt av
(D) Technische Dokumentation aktualisiert durch
(E) Documentacion tecnica mantenida por
(NL) Technische documentatie onderhouden door
(P) Documentação tecnica mantida por
(SE) Teknisk dokumentation tillhandhållen av
(GR) τεχνικό φάκελο που τηρείται από

BLUE BIRD INDUSTRIES – FABBRICA MOTORI s.r.l.

VANDA VITELLA



BLUE BIRD INDUSTRIES Fabbrica Motori s.r.l.

Via Due Camini, 19
36010 ZANÉ ITALIA

Tel. 0445 314138

Fax 0445 314225

www.bluebirdind.com